

# Alignment Guides for structural decks

//// VACLIFTING.CO.UK

4Cladding  
Services

---

When lifting structural deck sheets, 4 Cladding Services often provide an alignment guide. This guide comes pre-fitted to the suction pads.

It looks like the image to the right and sits between the suction pad and the black block mount.

The alignment guides are two adjustable plastic pieces on a runner. You can adjust them on-site to help place the suction pad on top of the steel decking. This makes positioning the pads easier.

They can be adjusted infinitely between a minimum gap of 80mm and a maximum gap of 240mm for different structural deck types and sizes.

---

## Some top tips on how to use them:

- 1 The guides should not be pinched tight against the crown of the deck.

If you get them too tight, they will cause problems when trying to achieve suction with the pad.

- 2 Once you have adjusted them for your first lift, you can leave them set at this point.

You do not need to keep adjusting them.

---

